

# 快速操作手册

一、外观结构示意图



二、摄像机RS232、RS422、RS485接口定义



三、拨码开关设置



SW1				SW2				
1 2 3 4 5 6 7 8 ON OFF				1 2 3 4 5 6 7 8 ON OFF				
1-3:	VISCA 地址			B1	B2	B3	B4	视频格式
	YUV输出 RGB输出 保留 RS-232 RS-422 2400Bps	OFF ON OFF ON OFF	OFF	OFF OFF OFF OFF OFF OFF	OFFFFFONN OFFFONN ON ON	OFF OFF ON OFF OFF ON ON	OFF OFF OFF OFF OFF OFF	1080i59.94 <b>1080p29.97</b> 720p59.94 1080p59.94 1080p50 1080i60 1080p30 1080p60 1080p50
	9600Bps 38400Bps	OFF ON	ON ON	ON ON ON ON ON ON ON	OFF OFF OFF ON ON ON	OFF ON OFF OFF ON ON	ON OFF ON OFF ON OFF ON	1080p25 720p50 1080p50 720p25 720p30 720p60 1080p50 47 45 44 44
			OFF ON OFF		OFF OFF ON		<u></u>	

### ⚠ 说明

**底部拨码开关SW1:** 1-3:代表VISCA协议地址设置,默认地址为1。当1-3都为OFF时,地址自动分配。最多支持7个。4:代表视频输出/视频颜 色空间设置。5:保留。6:代表RS-232/RS-422选择设置。7-8:代表RS-232/RS-422波特率选择。

**底部拨码开关SW2:**1-4代表视频格式,采用 OSD 菜单设置或底部拨码开关设置方式,两种方式互相覆盖,以最后设置的方式为准。 5-6:保留。7-8:代表红外地址。**拨码完成后,须上电重启。** 



### 四、遥控器按键说明



# 五、摄像机网络连接示意图



## 六、使用IE登陆网络摄像机WEB界面



#### 登录前检查

- 1.摄像机已上电并连接到网络交换机。
- 2. 摄像机的 IP 地址与 PC IP 地址要在同一子网内。
- 3. PC 连接到网络交换机
- 4. PC 安装有 Internet Explorer 11。
- 5.使用默认视频格式设置或使用 RS-485 键盘将摄像机视频格式设置为 1080P30 或 1080P25(请参阅摄像机设置菜单)。

#### 以IE为例

- 1. 在地址栏中输入摄像机的正确 IP 地址, 浏览登录页面。
- 2. 如果是第一次登录,请按照系统提示并安装 ActiveX。 需要关闭 浏览器才能完成安装。

3. 单击"允许"继续登录。

4. 输入默认用户名和密码(用户名: admin,密码: admin),然后单击 "登录"。为确保帐户安全,请在首次登录后更改密码。建议设 置一个强密码(不少于8个字符)。

### 🛆 说明

摄像机出厂默认IP地址为 **192.168.0.13**,默认子网掩码为 255.255.255.0。如果在网络中使用DHCP 服务器,则可能会动态分配 摄像机的 IP 地址,需要使用正确的 IP 地址登录。使用视频管理软件查看摄像机的动态 IP 地址。

#### 注意:

重要信息:如果更改了默认密码,请务必记下新密码,并保证安全。如果忘记密码,摄像机将需要硬件复位。重置服务可能需要支付额外费用(密码丢失时,请与厂家联系)。