








Positioning Template x1

1/4-20UNC x4


Safety Cable x1

Install ES-WM




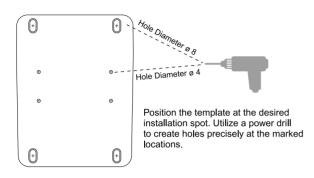


2.

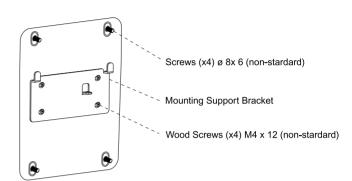

3.

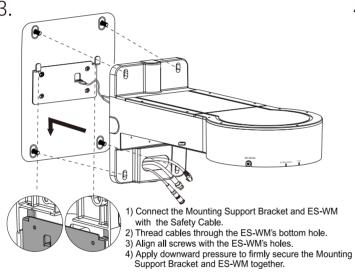


4.

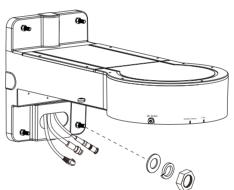



Fasten the bracket in place using nuts.

Install EXU series on ES-WM




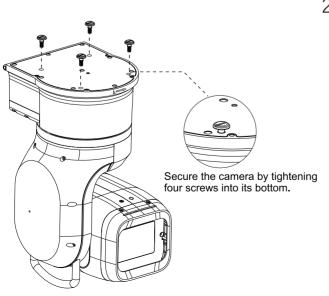

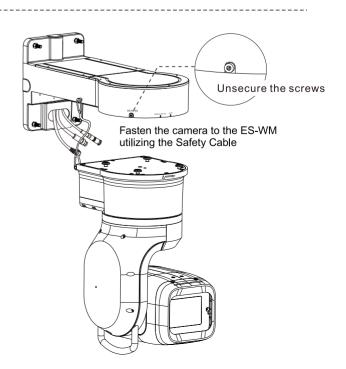


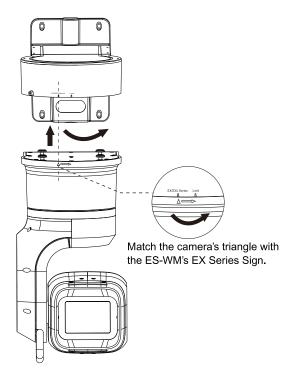

4.

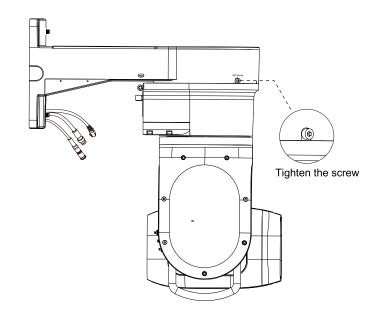


5.

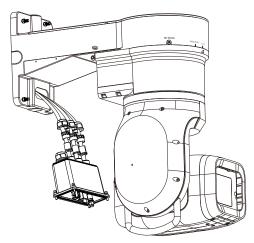


Thread the cables through the waterproof case.

6.

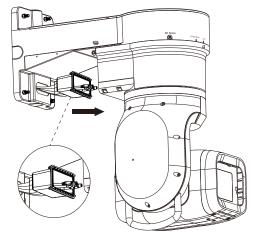


Plug cables into the camera's ports.


7.

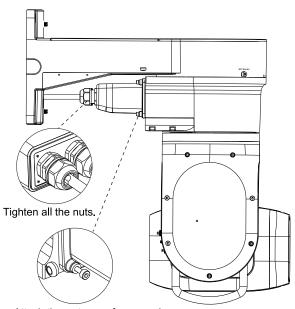


Attach the waterproof case and secure it by tightening the four screws.

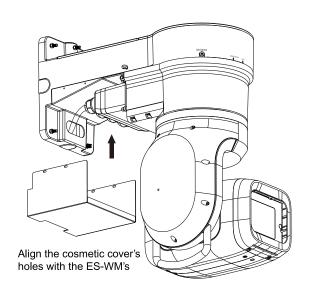



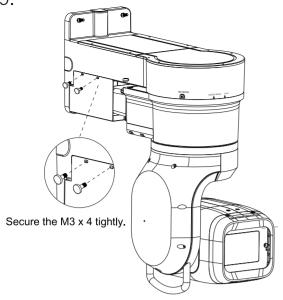


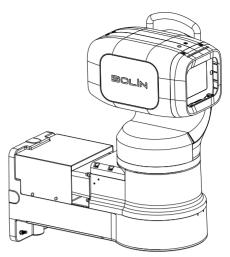


Please note: When the camera is mounted in an inverted position, the ES-WM bracket will also be oriented upside down.

Install Ex1030 on ES-WM


1.

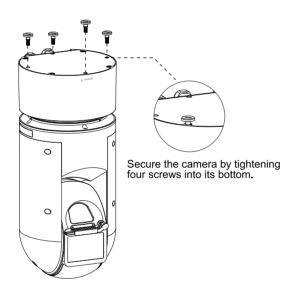



2.

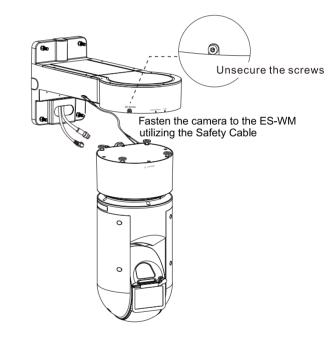


3.

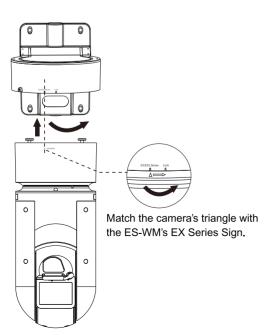

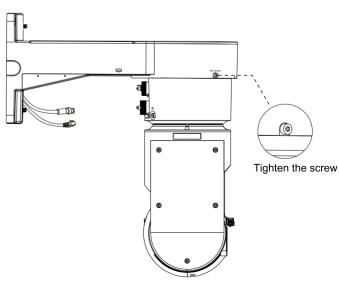

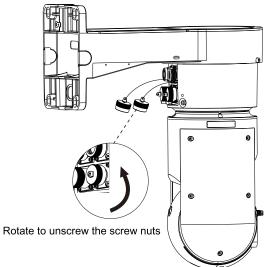


6.

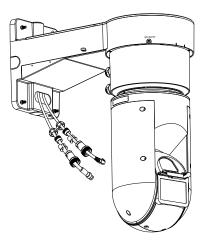


Thread the cables through the waterproof case.

7.

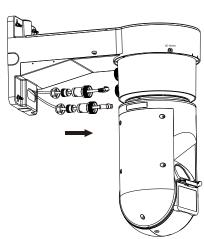



Plug cables into the camera's ports. and tighten the water-proof screw nuts

8.

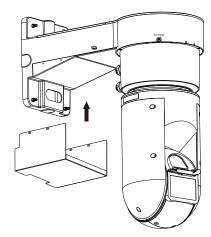


Align the cosmetic cover's holes with the ES-WM's

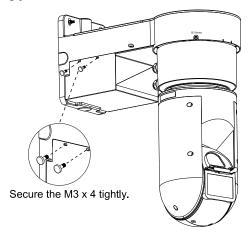


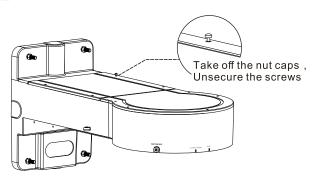

2.

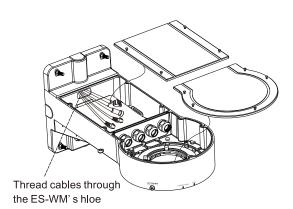


3.

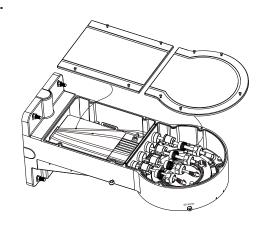

Thread the cables through the waterproof case.


4.

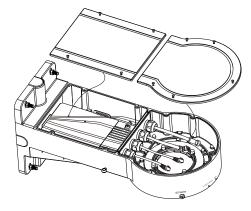



Reserve 20cm long cable , Twist each cap to fully seal the grommet around the cable $\,$

5


6

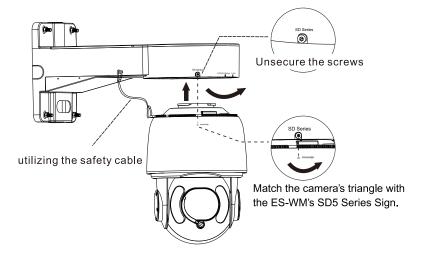

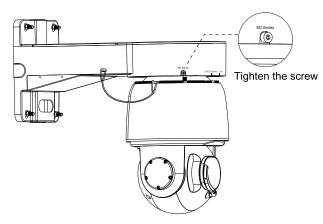

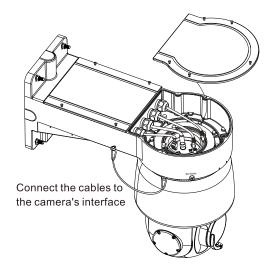

8.

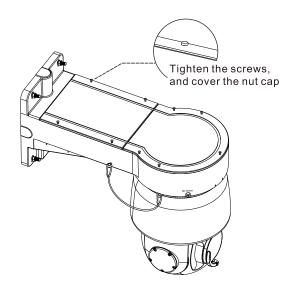

9.

