



QR-BM x1  
Bottom bracket




Hexagon spanner x1




1/4" Screw x4

1.

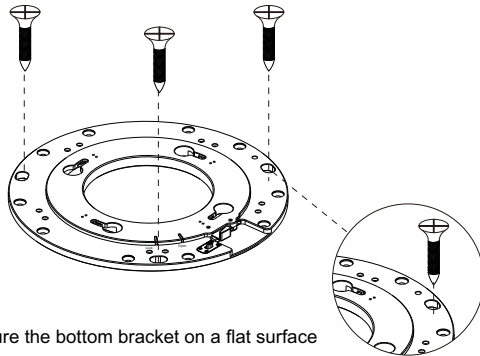

Secure the bottom bracket on a flat surface


2.

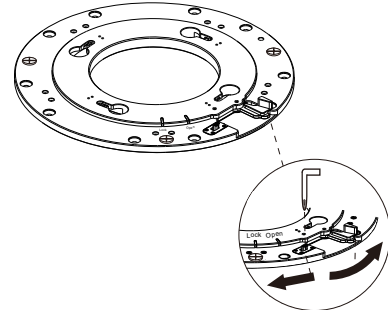

Use a hexagon spanner to unscrew the screw. Slide the buckle towards the left and swing the fixing lever to the right.


## EXU Series Installation Steps

1.

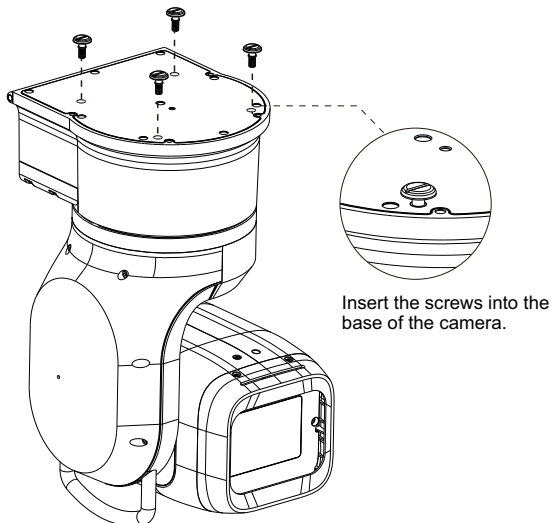


Insert the screws into the base of the camera.

2.

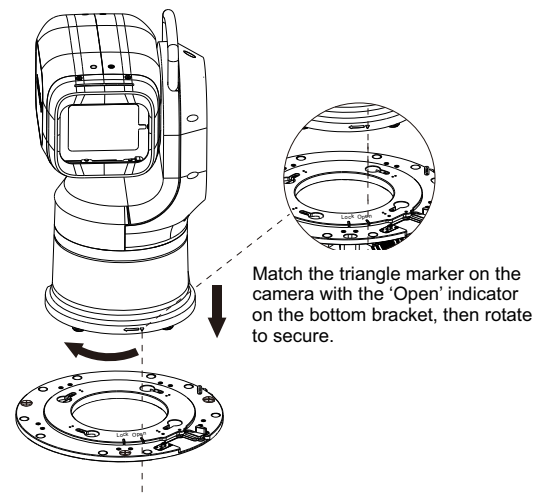


Match the triangle marker on the camera with the 'Open' indicator on the bottom bracket, then rotate to secure.

3.

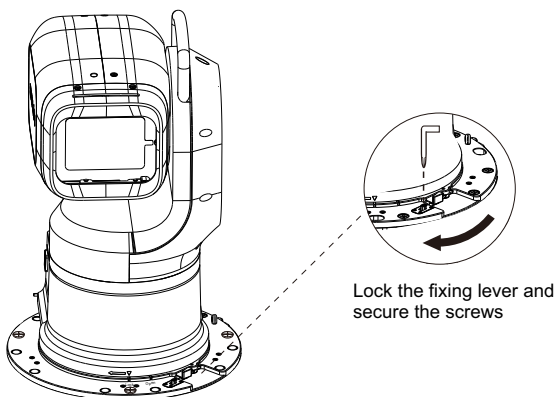


Lock the fixing lever and secure the screws

4.

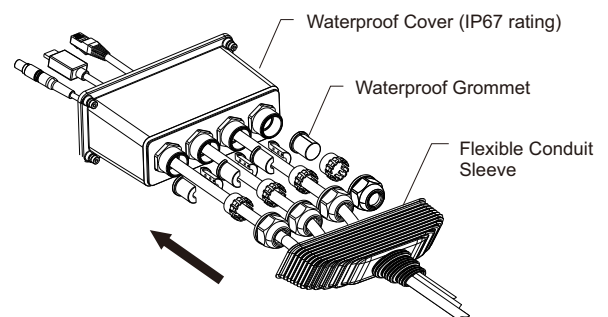


Thread the cables through the flexible conduit sleeve, the waterproof grommet, and into the waterproof case.


5

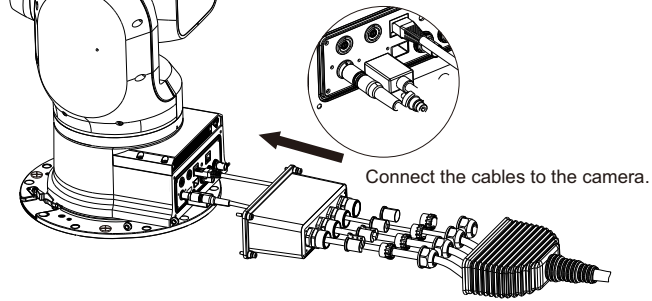

6.

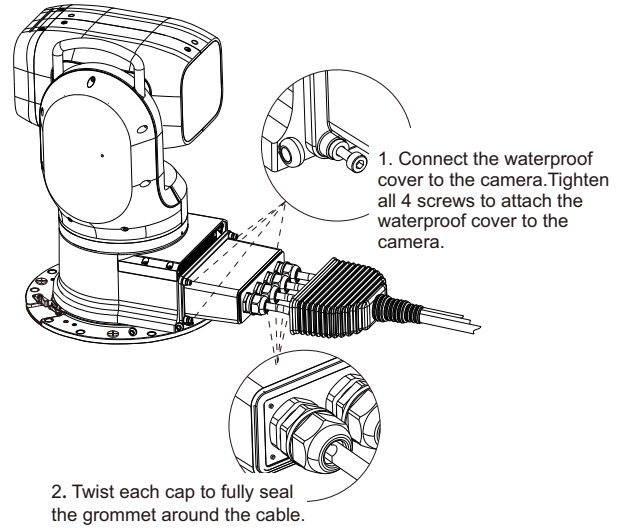


7.

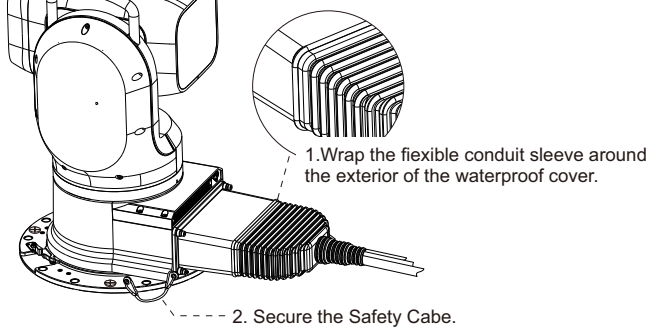


## EX Series Installation Steps


1

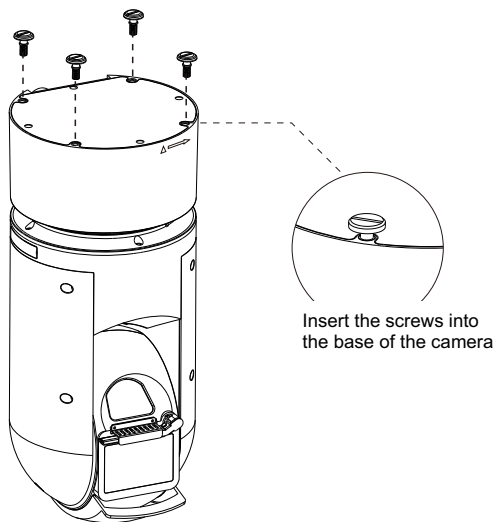


2.

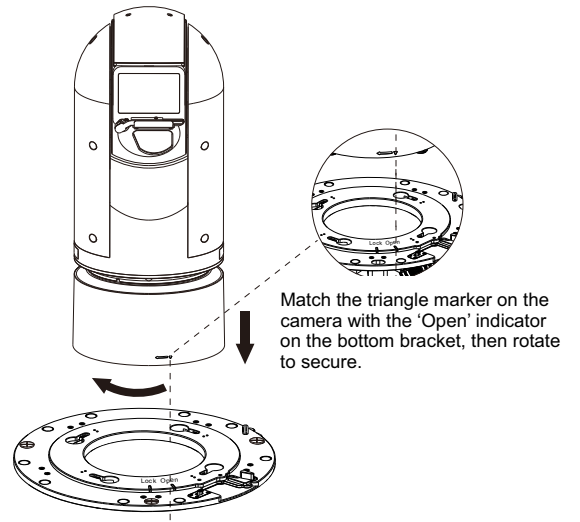


3.

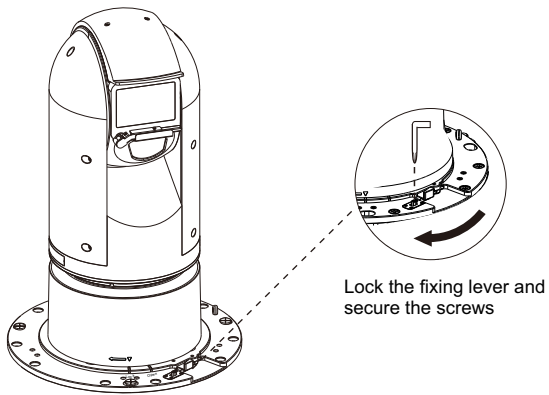


4.

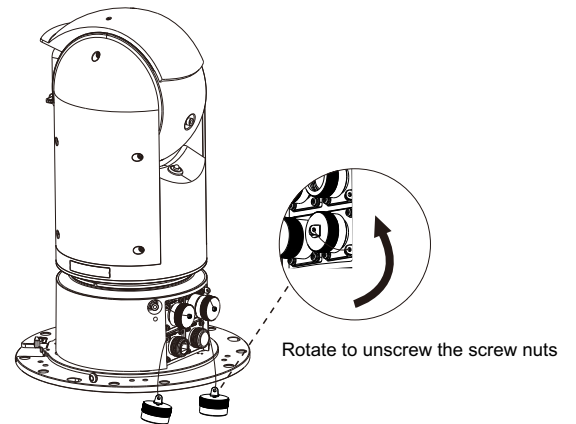

5.

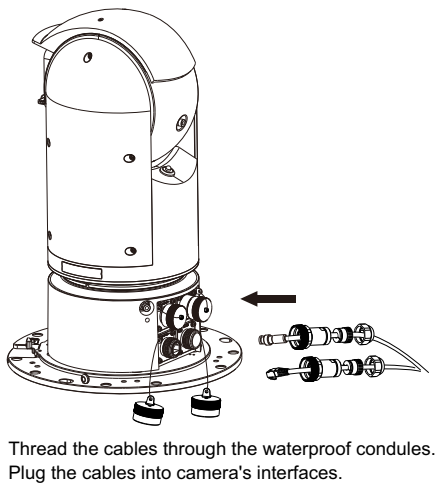


6.

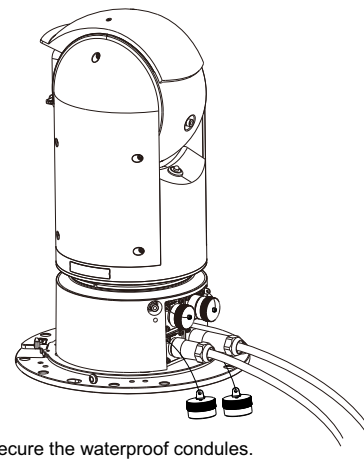


## RANGE Installation Steps


1.

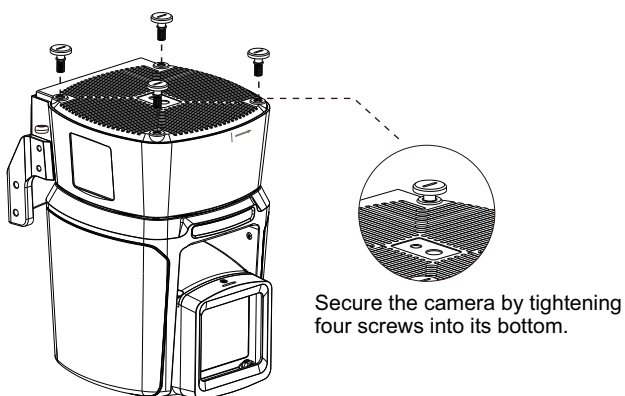


2.

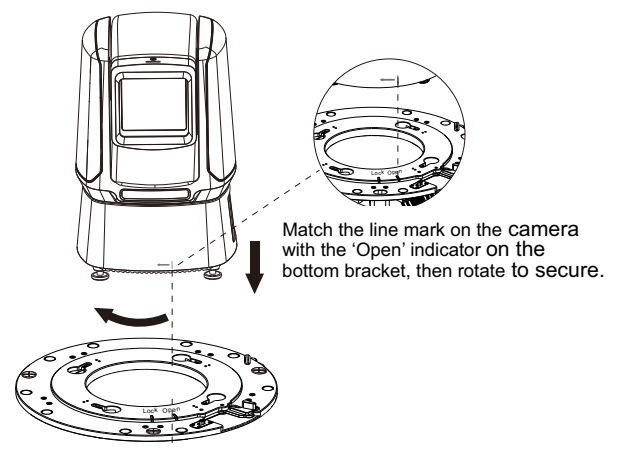


3.

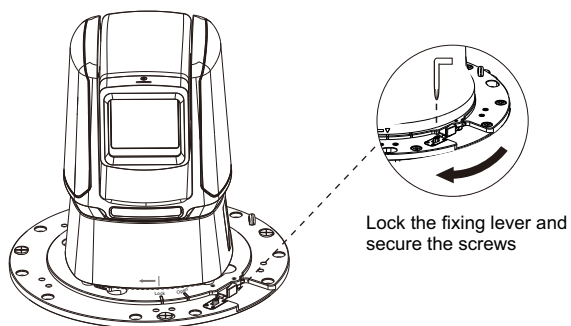


4.

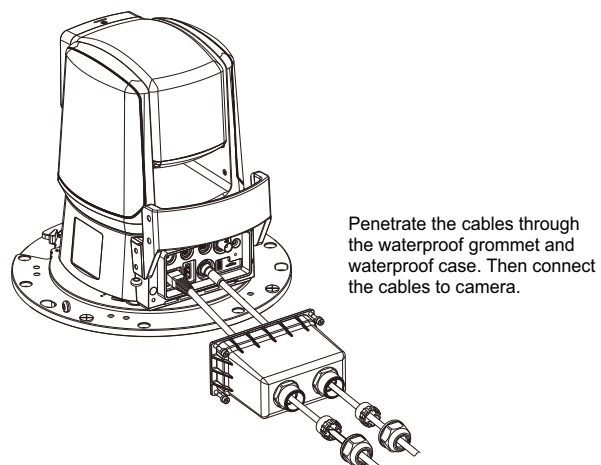

5.

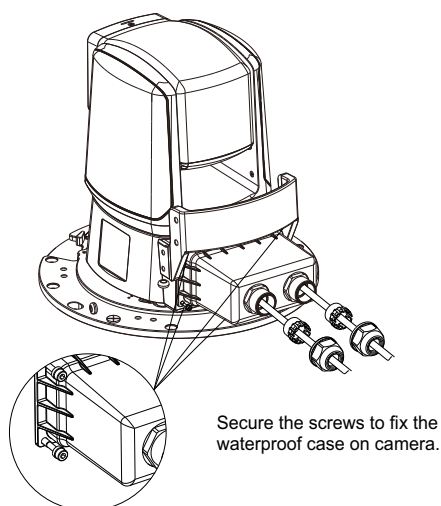

6.

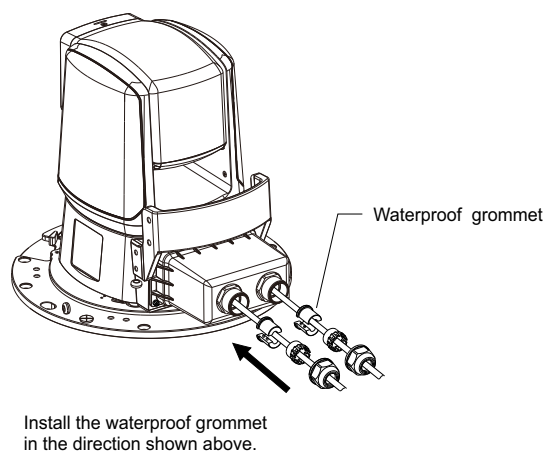

7.

